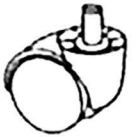


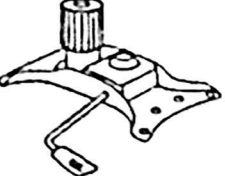



# K133 - návod k montáži

<b>A</b>  5 ks
<b>B</b>  8 ks M8 X35mm
<b>C</b>  4 ks M6X18mm
<b>D</b> 
<b>E</b>  8 ks φ22X φ8.5X2
<b>F</b> 